


TOOLS NEEDED: Phillips Head Screwdriver
7/16" or adjustable wrench
Regular Screwdriver

PARTS INCLUDED: 2 Arms - A & B
Pre-Assembled Back C
Pre-Assembled Seat D
2 Legs - E & F

HARDWARE: 4 - 3" Carriage bolts
2 - 2 1/2" Carriage bolts
2 - 4" Eye bolts
2 - Small Quick Links (attached to 4" eye bolts)
2 - 6" Eye bolts (attached to chain)
12 - Washers
8 - Nuts
1 - 1 5/8" Phillips Head Wood Screws
2 - Barrel nuts (installed in legs)
2 - 8' Chains
2 - Chain guides
4 - 1 1/4" Phillips Head Screws
2 - Large Quick Links

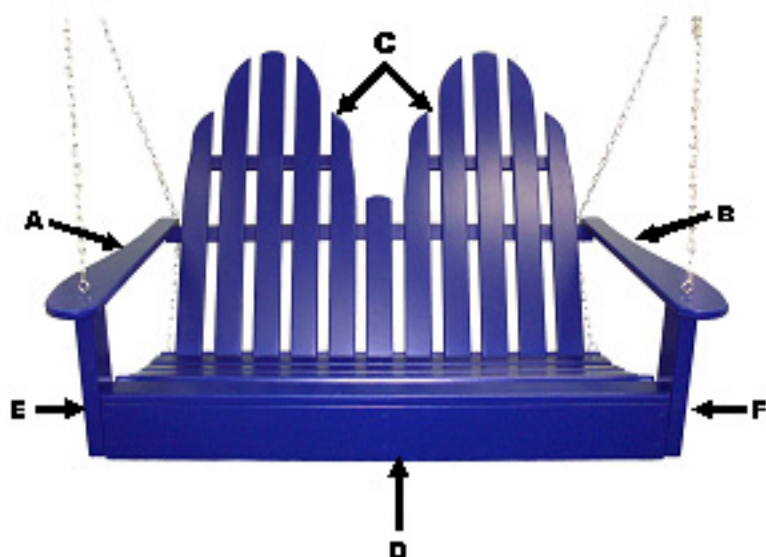

ASSEMBLY TIP: For ease of assembly, finger tighten all fasteners first. Tighten securely after all parts are aligned. Do not over tighten. Holes are drilled to easily accept hardware. However, because of finish the holes may be tighter than normal. Lightly tapping the hardware with a hammer will help with the assembly. Using some soap on the screws will make the job a little easier.




1. Place 4 - 3" carriage bolts through holes in E & F. Front edges of legs (E & F) should be flush with front of D. Attach to D with washers and nuts. The end with the hole should be placed at the top.



2. Attach arms (A & B) to front legs (E & F) using 2 - 4" eye bolts and washers. (NOTE: Barrel nuts may need to be re-aligned with a screwdriver. Align eye bolt and barrel nut before putting the arm in place).



3. Align base of C with two 1 1/4" holes in base of D. Fasten base of C to D using 2 - 6" eye bolts with washers on top and bottom and nuts.

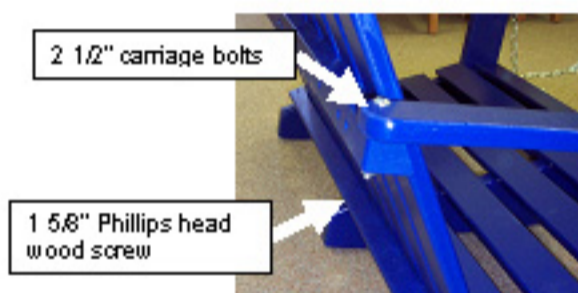

4. Place C into position and attach to Arms A & B with 2 - 2 1/2" carriage bolts. Fasten with washers and nuts. Fasten the center of back to the base using the 1 5/8" Phillips head wood screw.



Fasten above chain guide here on both sides.



5. Attach 2 chain guides to center brace of pre-assembled back C. Using 2 - 1 1/4" Phillips head wood screws for each, attach the guides onto both ends of the center brace. The guides are to be placed on the back of the center brace and aligned where the space is between the swing back and the arm.



Fasten the above small Quick Link to the eye bolt and chain before hanging.

6. Fasten the chain to the front eye bolt using the 2 - Quick Links by looping them through the chain and eye hook on both sides of the swing. Tighten all fasteners securely. Attach the large quick links to the center of each chain and hang on porch hooks.

NOTE: The chain must go on the inside of the chain guide.

CARE INSTRUCTIONS

Your new finished furniture requires very little maintenance. It may be washed with a mild detergent and water to remove surface dust and dirt. After prolonged exposure to the elements you may want to refinish it. We recommend lightly sanding it prior to refinishing, then use a cloth to remove the dust, refinish with a high quality exterior finish. It may be necessary at times to tighten the bolts and screws. It is normal for bolts to loosen somewhat in wood furniture. In northern climates, we recommend that the furniture be stored inside during the winter months.

LIMITED WARRANTY

This product is warranted only against defects in materials and workmanship for one year following the date of purchase. This limited warranty is in lieu of all other warranties, expressed or implied, and no one is authorized to assume for the company any other liability in connection with their sale of this product. This warranty gives you specific rights and you may also have other rights, which vary, from state to state.