


TOOLS NEEDED: Adjustable Wrench
Phillips Head Screwdriver

PARTS INCLUDED: Back Rest (A)
Seat (B)
2 Arms (C)
2 Front Legs (D)
Tray (E)

HARDWARE: 6 – 2" Bolts
6 – Cup Washers
6 – Lock Nuts
2 – 1 ¼" Phillips Wood Screws
2 – 1 5/8" Phillips Wood Screws
7 – Mini Washers
1 – 3/4" Wood Screw
2 – Large Washers
Rope
Safety Strap W/ Buckle

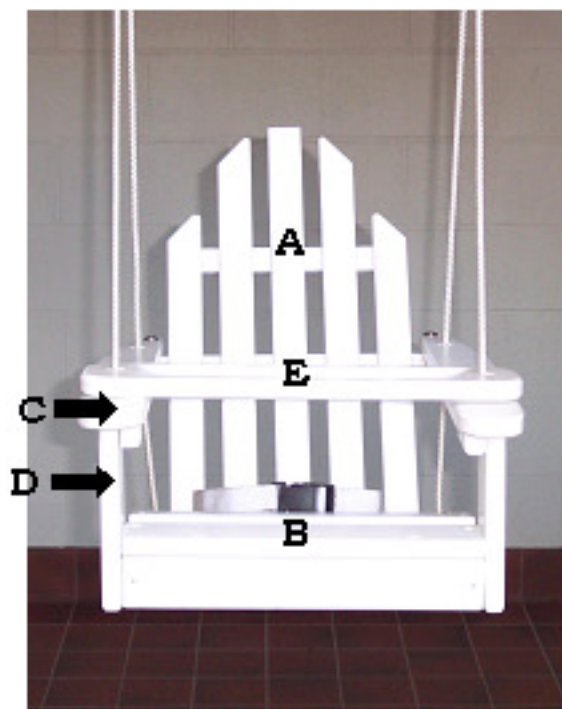

⚠ ASSEMBLY TIP: For ease of assembly, finger tighten all fasteners first. Tighten securely after all parts are aligned. Do not over tighten. Holes are drilled to easily accept hardware. However, because of finish the holes may be tighter than normal. Lightly tapping the hardware with a hammer will help with the assembly. Using some soap on the screws will make the job a little easier.



1. Attach front arms to legs through pre-drilled holes using (1) 1 ¼" wood screw on each arm. The leg aligns with the block on the wide side of the arm. The angled part of the arm will be attached to the seat so that the longest point is aiming towards the back of the swing.



2. Attach the front legs to the seat assembly using (2) 2" bolts, cup washers through the outside of the swing. Place the mini washers and locking nuts on the inside underneath




3. Place back assembly in position against the back seat slat and attach using (1) 1 5/8" wood screw on each side.




4. Attach arms to seat back through pre-drilled holes using (1) 2" bolt and a cup washer on the top of the arm and a mini washer and lock nut underneath.



5. On one end of the rope, slide a washer on and tie a tight knot.

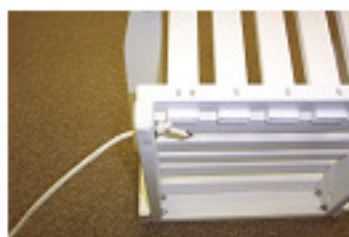

6. Insert the end of the rope without the knot through the hole in the back of the seat assembly from the inside to the outside so the washer and knot end up being tight against the inside of the seat assembly.

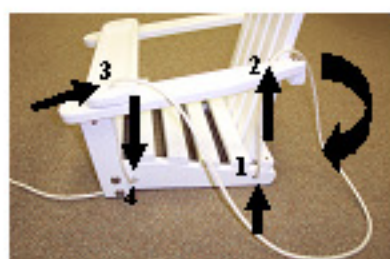

7. Feed the rope up through the hole in the arm above the first hole. The rope then goes from the top downward through the hole in the tray on the same side and then through the hole on the seat assembly from the outside to the inside.

8. From hole #4, the rope goes across the underside of the seat assembly and through the hole on the other side. Feed the rope through the hole in the tray going upwards. The next hole is on the arm at the back of the chair. The rope goes from the top downward for that hole. The final hole is on the seat assembly. The rope should go from the outside to inside on this hole.

9. After you have the rope fed through the chair, slide a washer on to the end and tie a knot just like you did in step #5. Pull on the ropes above the arms to adjust the swing so it is level. If the rope is too long for the place that you want to hang the swing, move the knot and washer on one end of the rope to a spot further up on the rope instead of at the end.

10. Securely tighten all nuts, bolts and screws.



11. Attach the safety strap through the backrest. The safety strap can be attached to the back of the chair using a 3/4" wood screw and mini washer. Make sure that the buckle is in a convenient place so you can easily get at it to fasten and unfasten the safety strap. The swing is now ready to be hung in the safe desired location.

THE SAFETY STRAP MUST BE SECURELY FASTENED AROUND THE CHILD WHENEVER THE CHILD IS IN THE SWING. FAILURE TO FASTEN STRAP SECURELY MAY RESULT IN INJURY

CARE INSTRUCTIONS

Your new furniture requires very little maintenance. It may be washed with a mild detergent and water to remove surface dust and dirt. After prolonged exposure to the elements you may want to refinish it. We recommend lightly sanding it prior to refinishing, then use a cloth to remove the dust, refinish with a high quality exterior finish. It may be necessary at times to tighten the bolts and screws. It is normal for bolts to loosen somewhat in wood furniture. In northern climates, we recommend that the furniture be stored inside during the winter months.

LIMITED WARRANTY

This product is warranted only against defects in materials and workmanship for one year following the date of purchase. This limited warranty is in lieu of all other warranties, expressed or implied, and no one is authorized to assume for the company any other liability in connection with their sale of this product. This warranty gives you specific rights and you may also have other rights, which vary, from state to state.

WARNING

Failure to follow assembly instructions or safety recommendations may result in bodily harm. Prairie Leisure Design is not responsible for accidents resulting from improper use or assembly of this product. Never leave child unattended. Always keep child in view while in swing. To prevent serious injury or death from falls or sliding out, always secure child in the restraint.