


Cabbage Hill Porch Swing Directions

Tools Needed: Cordless or Electric Drill—Phillips bit—all weather glue for joints. (Tite Bond II is a good glue and available at most hardware stores)

Hardware: (4) 2 1/2" Screws, (10) 3" Screws, (10) Wood Plugs, (2) 18" Chain, (2) 26" Chain, put together with (2) Quick Links, (8) Washers, (4) Eye Bolts, (4) Nuts.



Step 1— Lay both arm assemblies on table or flat surface as shown.

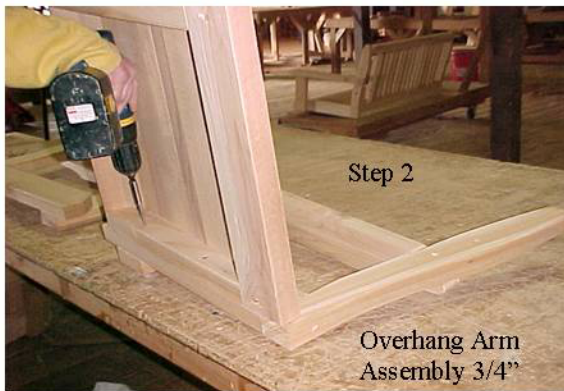

Step 2—Attach seat to arm assembly using 2 1/2" screws in pre-drilled holes as seen. Make sure seat is flush with the bottom of the arm assembly and that the arm assembly hangs over back of the seat assembly approximately 3/4", no more. Please note the dimple marks in the arm assembly are approximate and do not necessarily need to line up exactly with the pre-drilled holes in the seat assembly.

Repeat for other side.

Note: Attaching seat may require a second person to help hold in place.



Step 3—Attach seat support board using 3" screws in pre-drilled holes. Center board so that board is even on both ends and matches arm supports.



Step 4—Flip swing right side up to attach back.