


Shoreline Adirondack Chair Assembly Instructions

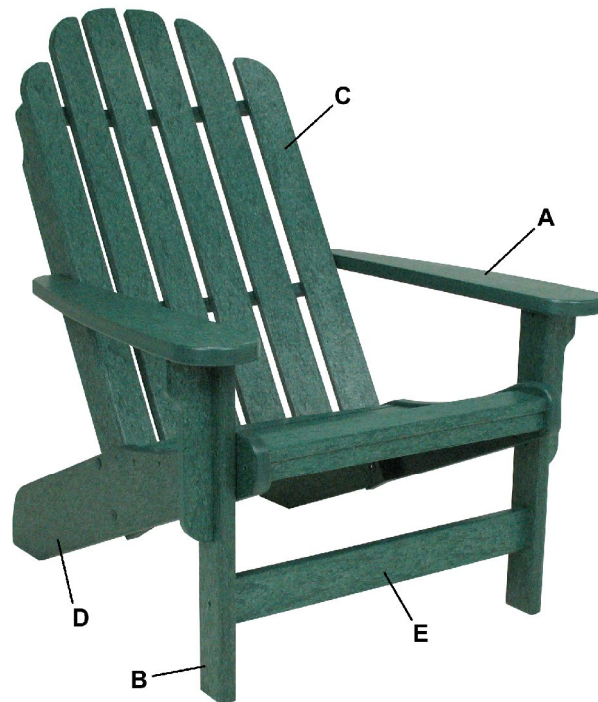

Tools:

Square Drive Tip (included) with a Power Screwdriver (not included)
3/16" Hex Keys (included)

Parts Included:

- A** Arms (2)
- B** Front Legs (2)
- C** Back Assembly (1)
- D** Seat Assembly (1)
- E** Leg Spreader (1)
- F** Large Head Bolts (4)
- G** Large Head Screws (2)
- H** 2½" Screws (4)
- I** 3" Screws (6)
- J** 1½" Screws (2)
- K** Square Drive Tip for Power Screwdriver
- L** 3/16" Hex Key

Instructions:

1. Attach Leg Spreader (E) to Front Legs (B) using 1½" screws.
2. Attach Front Legs to Seat Assembly (D) using 3" Screws (I). Locate pilot holes and screw two from the outside in and one from under the seat out.
3. Attach Arms (A) to Front Legs using 2½" Screws (H). Locate pilot holes and screw down from top of arm into leg.

4. Attach Back Assembly (C) to Seat Assembly using Large Head Bolts (F) and 3/16" Hex Key (L). These go into the pre-threaded inserts in the seat assembly. Do not fully tighten these.
5. Attach the Back Assembly to the arms using the Large Head Screws (G) and Square Drive Tip. These go from behind the back out into the arms. Screw through so tip is sticking out and align this with the pilot hole in the arm. Screw in the rest of the way.
6. Tighten the Large Head Bolts in the Seat Assembly.

Packaged with care by: _____