


## 4 Foot Saint Andrews

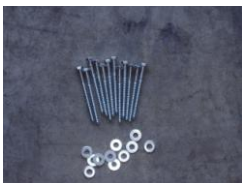

Hardware



Recycled Plastic Bases



Green Slats



4ft St Andrews

### PARTS LIST: (Quantity for one 4' bench)

QTY	ITEM
2	2" x 6"x 4' Bench Slats
2	Pre Drilled Bench Supports
8	1/4 x 3 1/2 Zinc Plated Lag Screws
8	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket Set with a 7/16" Socket

### INSTALLATION INSTRUCTIONS:


1. Check Parts list to verify all items.
2. Assemble on a flat, level surface.
3. Place washers on the Zinc Plated Lag Screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the pilot holes in the slats letting them extend through approximately 1/4" in order to line up with the pre drilled holes in the supports.
5. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
6. **DO NOT OVERTIGHTEN THE LAG SCREWS! THIS MAY CAUSE THE PLASTIC BENCH SUPPORTS TO STRIP OUT!**



---

[www.jayhawkplastics.com](http://www.jayhawkplastics.com)

## 6 Foot Saint Andrews

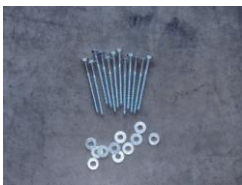

St. Andrews Hardware



St. Andrews Bases



St. Andrews Slats



St. Andrews

### PARTS LIST: (Quantity for one 6' bench)

QTY	ITEM
2	2" x 6"x 6' Bench Slats
3	Pre Drilled Bench Supports
12	1/4 x 3 1/2 Zinc Plated Lag Screws
12	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket Set with a 7/16" Socket

### INSTALLATION INSTRUCTIONS:


1. Check Parts list to verify all items.
2. Assemble on a flat, level surface.
3. Place washers on the Zinc Plated Lag Screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the pilot holes in the slats letting them extend through approximately 1/4" in order to line up with the pre drilled holes in the supports.
5. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
6. **DO NOT OVERTIGHTEN THE LAG SCREWS! THIS MAY CAUSE THE PLASTIC BENCH SUPPORTS TO STRIP OUT!**



---

[www.jayhawkplastics.com](http://www.jayhawkplastics.com)

## 8 Foot Saint Andrews

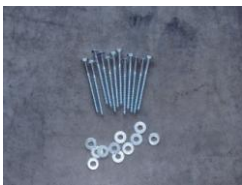

Hardware



Recycled Plastic Bases



Slats



8ft St Andrews

### PARTS LIST: (Quantity for one 8' bench)

QTY	ITEM
2	2" x 6"x 8' Bench Slats
4	Pre Drilled Bench Supports
16	1/4 x 3 1/2 Zinc Plated Lag Screws
16	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket Set with a 7/16" Socket

### INSTALLATION INSTRUCTIONS:

1. Check Parts list to verify all items.
2. Assemble on a flat, level surface.
3. Place washers on the Zinc Plated Lag Screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the pilot holes in the slats letting them extend through approximately 1/4" in order to line up with the pre drilled holes in the supports.
5. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
6. **DO NOT OVERTIGHTEN THE LAG SCREWS! THIS MAY CAUSE THE PLASTIC BENCH SUPPORTS TO STRIP OUT!**



---

[www.jayhawkplastics.com](http://www.jayhawkplastics.com)