


How To Assemble Your Ottoman

TOOLS NEEDED: Philips screwdriver, power drill optional

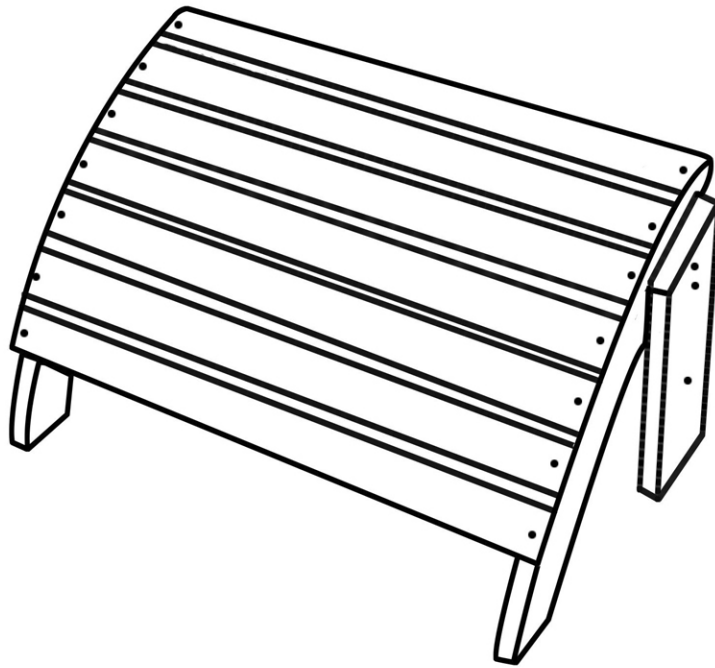


Step 1. Attach both A & B Front Legs to A Top Panel using 4 (6 x 45 ^m/_m) bolts.

Step 2. Place 2 barrels into C Leg Connector with the cross of the barrel facing outward. Attach C Leg Connector to both A & B Front Legs using 2 (3.5 x 35 ^m/_m) screws.


Step 3. Tighten all bolts and screws. Enjoy your ottoman!

PIECES INCLUDED:


*Extra hardware may be included

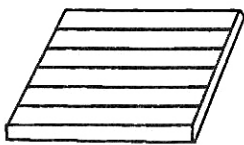

A Top Panel

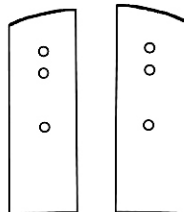

A & B Front Legs



C Leg Connector



6 x 45 ^m/_m
Bolts (4)



3.5 x 35 ^m/_m
Screws (2)



Barrel (2)